


Remote Instruction

Components

1. Brightness display
2. Color temperature display
3. Channel display
4. Group display
5. Signal light
6. Special effect button
7. SPD-
8. Brightness +
9. Color temperature -
10. Switch on/off button (Press for 2 seconds to turn off)
11. Brightness -
12. Color temperature +
13. SPD+
14. Confirm button
15. CCT button
16. Menu button

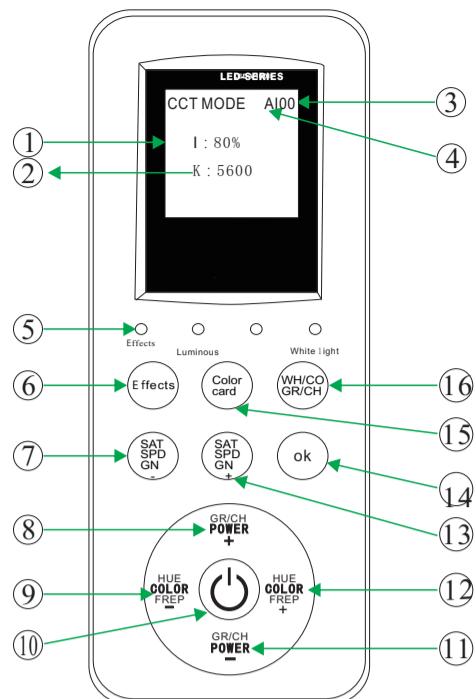

Operating Instruction:

1. Install two pcs 7# batteries.
2. Group Setting: Press the WH button, Select group/channel settings, Enter the group, Press the brightness + key to select (ABCD), Then enter the frequency setting (0-10) channel, and press the OK key to confirm. In the group state (channel is not displayed), all hosts in the same group as the remote control can be adjusted uniformly. In the channel state, all hosts in the same group and channel as the remote control can be adjusted.
3. Press the 15# button then enter CCT mode.
4. Press POWER+ to adjust power, COLOR+ to adjust color temperature, and SPD+ to adjust speed.
5. Press Effects to enter special effects mode, press the brightness + key to select special effects mode, and press OK to confirm.

Notices :

1. Please read this manual carefully before you use this product.
2. There is high pressure in the machine, non-professionals are strictly prohibited to disassemble.
3. Damage caused by human factors or irresistible factors is not covered by the warranty.
4. The machine must be grounded for safety, and should not be used in a humid or poorly ventilated environment.
5. When the product is not in use, please remove the battery to prevent damage caused by battery leakage.
6. Do not fall and impact the battery to avoid fire.
7. It is strictly forbidden to put the battery into fire and short circuit the positive and negative poles of the battery to avoid danger.
8. Within one year from the date of purchase, if there is any quality problem with the product, you can go to the company's specialty stores for free maintenance with the invoice at the time of purchase.

STUDIO PANEL 200 T



Specifications



Model	STUDIO PANEL 200T
Power	200W
Lumen(LM)	20000
Color Temperature	2700K-7500K±300K
Color Light	Warm light+White light
CRI	≥95 R A
Light Angle	120°
Control Mode	Panel control、Remote、Wire/wireless DMX control
Effective Distance	30 Meters
Voltage	AC110V-220V~2A 50/60Hz
Standard Package :	AC Adapter、Power Cord、Instruction
Optional Accessories	£ 4.8V and 26V Battery、DMX controller,wireless transmitter(for DMX/App control)、Remote

Product Overview

GL series studio light contains high efficiency, energy saving SMD led chips. Dimmable color temperature 2700-7500k with high CRI 95Ra ; It Works on Sony BP-L40 battery、110-220V power supply, Suitable for: broadcast studio, TV shows & film shootings, indoor&outdoor wedding shootings, Children&product photography, fill light.

1. Wired DMX Control

Connect the console and led lights with DMX cables (As shown in the following figure) Set the address of the LED light same with the address of the console.

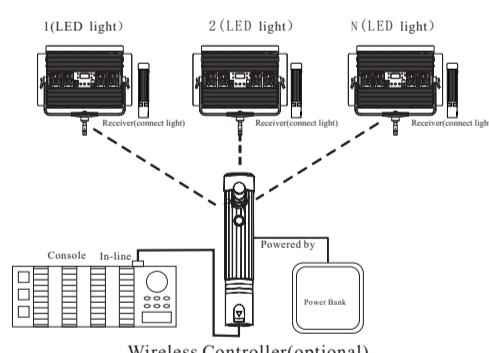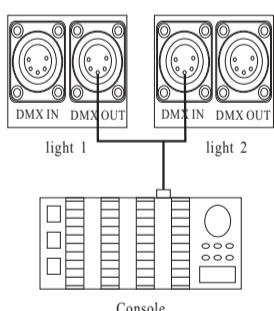


3. Channel table corresponding to DMX console

CH1	Brightness0-255											
CH2	Colortemperature/Speed0-255											
CH3	0-16	17-39	40-64	72-88	89-111	112-134	135-160	161-183	184-207	208-231	232-255	
CCT	paparazzi	Strobe light	Badblub	TV	lightning	candle	flashing	CLOUDS	bombing	Double flashing		

how to install soft filter/barn doors


1、install barn doors : After loosening the 4 white screws, turn left or right to remove the light shield.

2、install soft filter : After removing the light shield first, bend the diffuser with force, and then take out the diffuser.

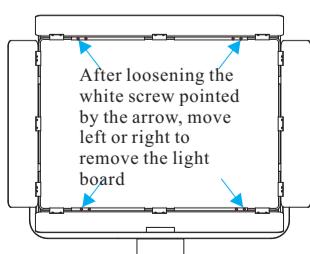

Instructions

1. Connect the AC adapter or battery to the LED light, put the power switch in the I state to turn on the LED light, and the display screen and LED light beads will light up at this time.
2. Set group/channel/DMX method: Press <MENU>, rotate the knob to select menu, press the knob to enter the group, then rotate the knob to set group (ABCD), after entering channel, rotate the knob to set channel (0-10). After entering DMX, rotate the knob to set DMX address (X001-512), after entering APP, rotate the knob to set ON/OFF
3. Soft light mode operation: Press <CCT> to enter soft light mode, press the multi-function button, select power temperature, and rotate the knob to adjust power and color temperature.
4. Special Effects Mode Operation: Press the <FX> button to enter the special effects mode, rotate the knob to select the special effects menu, 0 CCT, 1 paparazzi, 2 Strobe light, 3 Bad blub, 4 TV, 5 lightning, 6 candle, 7 flashing, 8 CLOUDS, 9 bombing, 10 Double flashing
5. Press <3200/4400/5500K> hot key to get 3200K 4400K 5500K/80% power quickly.
6. Insert the DMX512 signal into the DMX jack, after corresponding to the address of the host, you can use the console to adjust the host, or you can purchase the wireless transmitter of our company for DMX wireless control and mobile phone control.

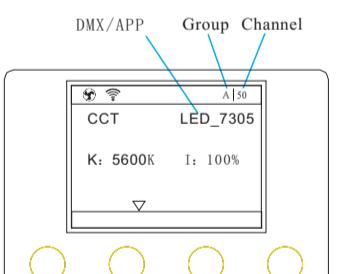

Components

- 1、Barndoar
- 2、Angle control wrench
- 3、Battery loading and unloading buttons
- 4、Battery plate
- 5、Indicator light
- 6、Power switch
- 7、CCT button
- 8、FX button
- 9、monitor
- 10、group/channel/DMX /APP setting button
- 11、3200、4400、5500K hot key
- 12、D MX port
- 13、DC socket
- 14、multiple function key
- 15、Handle
- 16、Tripod locking knob

